



① Right Corona 1

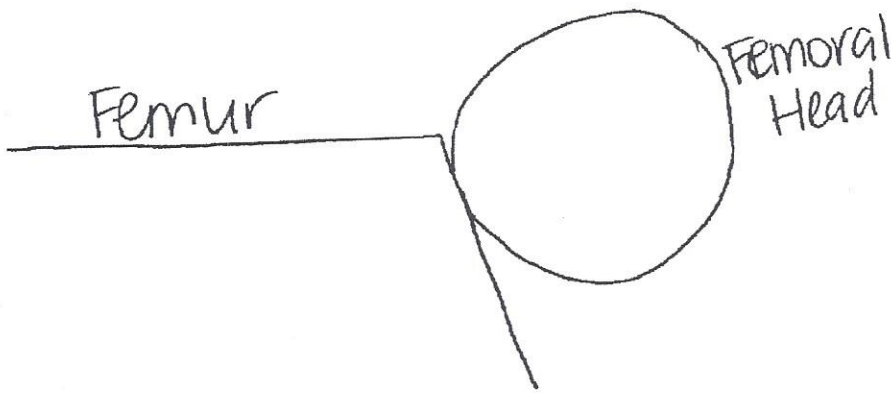


Probe "Sag"
- Start towards baby's butt & angle up.

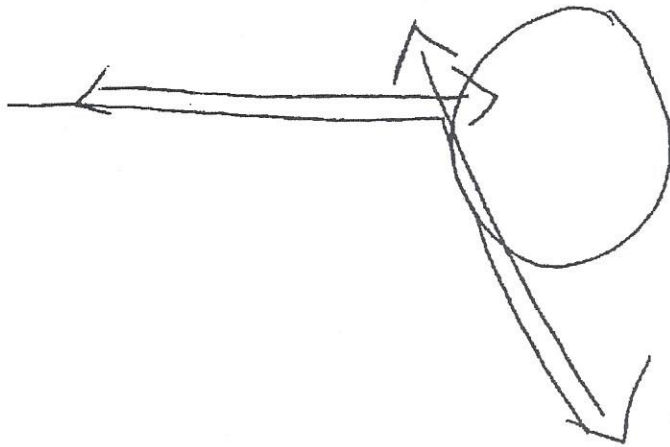

Take Alpha
measurement

② Right TRV

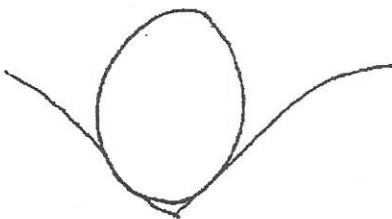


Take Trans
Over Hip




- STRESS

③ Right AXIAL

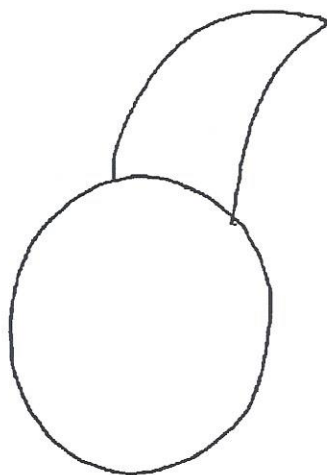

45° probe

Hand down femur
midway & angle up
toward hip.

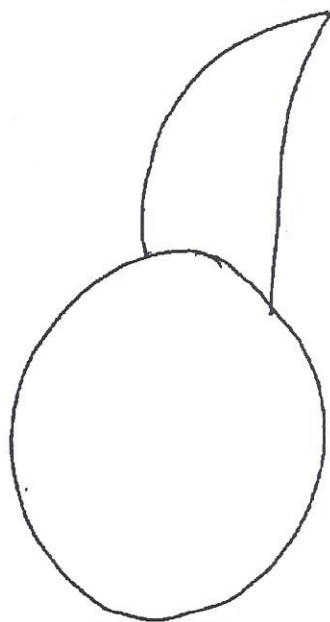

* STRESS

* Left Same except in TRANS

the probe notch is back wards

facing parents *